

MEET THE GIRLS™

Adorable. Not Innocent.

USER MANUAL



Awaken new sensations.
www.Vibratex.com

Save these instructions
See important warnings inside

CONTENTS

Getting started	2
Charging your Girl	2-3
Using your Girl	4
Care and cleaning	4
Troubleshooting	5
Warranty	5
Warnings	6
Specifications	6
Disposal information	6
The Girls – by Vibratex	6

GETTING STARTED

Thank you for purchasing one of The Girls. We hope you will have a lot of fun together.

Before starting, charge your Girl as described below. See “Charging your Girl” for more information. Once charged, press the single-button control once to activate. See “Using your Girl” below for more information.

CHARGING YOUR GIRL

To charge your Girl using the charging cradle, place your Girl on the cradle, connect the charging plug to the cradle and connect the USB plug to a USB port. Or, for quicker charging, you may connect the USB plug to the included wall adapter and connect the wall adapter to a regular 110V outlet. A red light on the charging cradle will shine steadily to indicate that your Girl is charging. Once fully charged, a steady green light on the charging cradle will come on.



To charge your Girl without the cradle, connect the charging plug directly to the charging port on the bottom of the Girl and then connect the USB plug to a USB port. You may also connect the USB plug to the included wall adapter and connect the wall adapter to a regular 110V outlet. A blue indicator light surrounding the charging port will shine steadily to indicate that it

is charging. It will switch off when charging is complete.

A complete charge takes 60-75 minutes (wall outlet), 90-115 minutes (USB port).

WARNING: Do not charge your Girl near water.

- 1 - Charging port
- 2 - Indicator light (blue; ring around the port)
- 3 - Single-button control
- 4 - Cable
- 5 - Charging plug
- 6 - USB plug
- 7 - Wall adapter
- 8 - Charging cradle
- 9 - Charging pin
- 10 - Indicator lights (red and green)
- 11 - Cradle charging port (not pictured, back side of charging cradle)

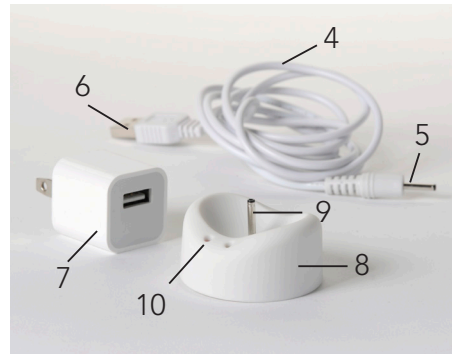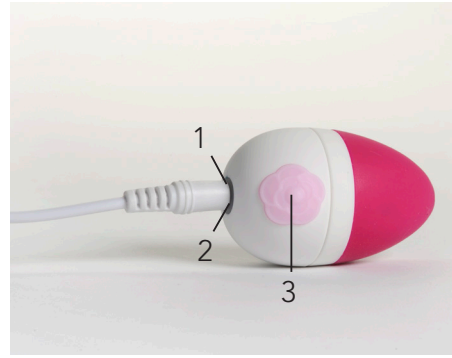

3.

USING YOUR GIRL

Press the single-button control once to turn on your Girl. This is the low setting. Press it again to increase the vibration to medium, then high intensity. Press it again to activate a pulsating, then escalating, and finally a combination of pulsating and escalating vibration patterns. Press the control again and your Girl shuts off.

A blue light around the charging port at the bottom of your Girl comes on whenever the unit is on.

To immediately shut down your Girl from any setting, press and hold the control for 2 seconds.

If desired, use a water-based lubricant on your Girl. Do not use silicone-based lubricants, nor any other type of cream, butter or oil.



CARE AND CLEANING

Clean your Girl with an anti-bacterial toy cleaner or with a mild soap and warm water. Dry completely before storing. Never use cleansers containing alcohol, benzene or acetone. Your Girl is shower proof and splash proof. Do not submerge it in water.

WARNING: Do not charge your Girl near water.

4.

TROUBLESHOOTING

If your Girl doesn't start vibrating when you press the single-button control once:

- › The battery is drained.
Connect your charger.

If the charging indicator on the charging cradle, or on the Girl, doesn't light up when connected to a power source:

- › The battery is completely empty.
Allow several minutes for the unit to respond.
- › The unit, charging cradle or wall adapter is not properly connected. Check your power source, USB plug, charging plug and all connections.

If you experience any other problem, or have a question about your Girl, please email: customerservice@vibratex.com

- If you believe you have a warranty issue, please email customerservice@vibratex.com.
- Carefully package product for prepaid shipment and insure it with the carrier.
- Retain tracking information for your protection in case of loss or damage in shipment.
- Vibratex is not responsible for loss or damage during incoming shipment.

WARNINGS

For adult use only. For external use only. **Do not insert into any body cavity.**

Do not use on skin that is swollen, inflamed, blistered or broken. This is not a medical device. Do not use around your chest or throat. If you experience severe discomfort during use, you should stop using this product and consult your healthcare professional.

© 2014 Vibratex, Inc. All rights reserved.

WARRANTY

The Girls are backed by a one-year limited warranty. If you have questions concerning your Girl, or if it is not functioning properly, please email: customerservice@vibratex.com.

This warranty covers all defects in workmanship or materials, arising under normal usage and care, for a period of 12 months from the date of purchase. This warranty covers units purchased and used within the U.S. and Canada. You must keep your original proof-of-purchase to obtain warranty service. Do not attempt to repair this product yourself.

During the applicable warranty period, and within normal household use, Vibratex will repair or replace the unit with a comparable model. In the event service is required:

5.

SPECIFICATIONS

Material: Velvety silicone, ABS
Charger input: 100-240V ~ 50/60Hz
Charger output: 5V, 1000 mA
Charging: 60-75 minutes (wall outlet), 90-115 minutes (USB port)
User time: 60-75 minutes
Designed & developed in Japan
Made in PRC
*Specifications are subject to change without prior notice.

DISPOSAL INFORMATION

If you decide to dispose of your Girl, please bring it to a collection point for recycling of electrical and electronic equipment.

THE GIRLS – BY VIBRATEx

For over 30 years Vibratex has brought America toys with a heritage: unique, thoughtfully crafted, with the power to satisfy, again and again.

Vibratex

Awaken new sensations.

6.