

INSTALLING BATTERIES

To open the battery compartment, hold the Mystic upside down, with the head pointing down. Gently twist the battery compartment cap at the top a few turns counter-clockwise. Insert 4 AA batteries in the direction indicated in the drawing on the right. Replace the cap, securing it by twisting it a few turns clockwise, until the seal is tight.

This warranty covers all defects in workmanship or materials, arising under normal usage and care, for a period of 12 months from the date of purchase. This warranty covers products purchased and used within the U.S. and Canada. You must keep your original proofof-purchase to obtain warranty service. Do not attempt to repair this product yourself.

During the applicable warranty period, and within normal household use, Vibratex will replace the product with a comparable model. If you believe you have a warranty issue, please follow these steps:

- a. Email customerservice@vibratex.com.
- b. Carefully package product and ship to Vibratex. Insurance is recommended.

3

CONTENTS

USING THE MYSTIC

Enjoy!

Mystic	1
Getting started	2
Installing batteries	3
Using the Mystic 4-	5
Care and cleaning 5-	6
Troubleshooting	
Warranty6-	8
Warnings	8
Specifications	9
Disposal information	9

The Mystic has three different vibration inten-

sities and three exciting vibration patterns.

To get started, press the lower, on/off but-

to increase the vibration intensity through

medium and high levels. Press the function

revert to steady, low vibration.

button again to activate three different vibra-

tion patterns. Press the button a sixth time to

To immediately shut down the Mystic at any

time, press the lower, on/off button.

If desired, water-based lubricants can be

c. Retain tracking information for your

WARNINGS

protection in case of loss or damage in

For adult use only. Do not use on skin that is

swollen, inflamed, blistered or broken. This is not a medical device. No medical claims

are warranted or implied by the use of this

not use around your chest or throat. If you

experience any discomfort during use, you

your healthcare professional.

should stop using this massager and consult

product. Clean thoroughly after each use. Do

shipment. Vibratex is not responsible for

loss or damage during incoming shipment.

ton. Then, press the upper, function button

MYSTIC

Congratulations. And thank you. You are about to experience the Mystic from Vibratex. A secret, trusted lover that goes everywhere you do; surprisingly powerful, yet blissfully discrete. We hope you will be wonderfully satisfied with the Mystic.

For over 30 years Vibratex has brought America fine pleasure products with a heritage: unique, thoughtfully crafted, with the power to satisfy, again and again. Vibratex first rose to fame after Charlotte, in Sex and the City, discovered the thrills of the original Rabbit Habit® by Vibratex in 1998.

GETTING STARTED

To get started, insert batteries as described below. Then, press the lower, on/off button to get the magic started. See "Installing batteries" and "Using the Mystic" below for more information.



2

used with the Mystic. Do not use lubricants containing silicone, or any other type of cream, butter, petroleum jelly or oil.

WARNING: Do not use the Mystic for more than 20 minutes at a time. Be careful never to fall asleep with the massager turned on.

CARE AND CLEANING

SPECIFICATIONS

Material: Body-safe silicone, ABS

Designed and developed in Japan

* Specifications are subject to change without

Powered by 4 AA batteries

DISPOSAL INFORMATION

Please discard batteries responsibly. If

available where you live, please drop them

Made in Japan and PRC

prior notice.

off for recycling.

Clean the upper, silicone, part of the Mystic before the first use, and after each use, with an anti-bacterial toy cleaner or with a mild anti-bacterial soap and warm water. Dry completely before storing. Never use cleansers containing alcohol, benzene or acetone. Do not store the Mystic together with vinyl products.

5

1

The Mystic is splash proof and shower friendly. Do not submerge it in water.

TROUBLESHOOTING

If the Mystic doesn't start vibrating when you press the lower, on/off button, try inserting fresh batteries. If that doesn't help, or if you experience any other problem, or have a question about the Mystic, please email: customerservice@vibratex.com.

WARRANTY

The Mystic is backed by a one-year limited warranty. If you have questions concerning the Mystic, or if it is not functioning properly, please email: customerservice@vibratex.com.

6

MYSTIC By Vibratex

For over 30 years Vibratex has brought America toys with a heritage; unique, thoughtfully crafted, with the power to satisfy, again and again.

Vibrate C.

Awaken new sensations.

© 2014 Vibratex, Inc. All rights reserved.

8

4

9