

RABBIT HABIT® ORIGINAL DELUXE

User Manual
Save these instructions.
See important warnings inside.

AWAKEN NEW SENSATIONS



CONTENTS

A legend returns	1
Getting started	2-3
Installing batteries	4-5
Using the Rabbit Habit	4-7
Care and cleaning	7
Troubleshooting	8
Warranty	8-10
Warnings	10
Specifications	11
Disposal information	11

A LEGEND RETURNS

Thank you for purchasing the Rabbit Habit Original Deluxe. This is the one and only rabbit that gave rise to the habit. Featured on Sex and the City (and in Cosmo, "O" Magazine, Glamour), it has been widely imitated, but never equaled.

Now, the Rabbit Habit Original Deluxe has been updated to the highest level of cravability. Silent, yet deeply satisfying power and a finely tuned body fit for extended, intensifying pleasure. We hope you will be wonderfully satisfied with your choice.


1

GETTING STARTED

To get started, insert batteries as described below. Then, press the middle left button (tickler vibration) and middle right button (shaft rotation) to get the magic started. See "Installing batteries" and "Using the Rabbit Habit" below for more information.

- | | |
|-----------------------------------|--|
| 1 - Tickler | 7 - Shaft pattern control |
| 2 - Rotating shaft | 8 - Shaft rotation on, intensity control |
| 3 - Pearls | 9 - Immediate-off button, shaft |
| 4 - Tickler pattern control | |
| 5 - Tickler on, intensity control | |
| 6 - Immediate-off button, tickler | |

2

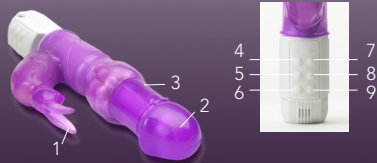

INSTALLING BATTERIES

To open the battery compartment, hold the Rabbit Habit upright, with the white control unit down. Gently twist the cap, at the bottom of the white control unit, half a turn clockwise. In the battery carrier that appears,

3

place 4 AAA batteries in the indicated direction. Reinsert the battery carrier and then replace the cap, securing it by twisting it gently half a turn counter-clockwise.

USING THE RABBIT HABIT

The Rabbit Habit's motion is almost infinitely customizable. Enjoy!

The left buttons control tickler vibration.

The right buttons control shaft rotation.

Press the middle left button to turn on the tickler vibration, and the **middle right button** to turn on the shaft rotation. Press either button again to increase the intensity of vibration or rotation through three additional intensity

4

levels. Press either button a fifth time to return to the lowest intensity.

Press the top left button to change the tickler vibration to a quick pulsating pattern, then an elongated pulsating, an escalating pulsating, a rising and falling pulsating pattern, and finally back to steady vibration. **Press the top right button** once to change the shaft rotation to steady clockwise, then to back and forth, then to intermittent counter-clockwise, then intermittent clockwise, and finally back to steady counter-clockwise rotation.

To **immediately shut down** either the tickler or the rotating shaft, **press the bottom left or bottom right button**.

5

If desired, **both silicone-based and water-based lubricants** can be used with the Rabbit Habit. Do not use any other type of cream, butter, petroleum jelly or oil.

To customize how widely the shaft rotates ("the arc"), please ensure the unit is turned off, then grip firmly around the pearls, and gently bend the shaft **above** the pearls. Do not bend at or below the pearls, as that may destroy the product. Never bend the shaft so that it extends out further than the tickler does.

WARNING: Do not use the Rabbit Habit for more than 20 minutes at a time. Be careful

6

never to fall asleep with the product turned on.

CARE AND CLEANING

Clean the upper, elastomer, part of the Rabbit Habit before the first use, and after each use, with an anti-bacterial toy cleaner or with a mild anti-bacterial soap and warm water. Dry completely before storing. Never use cleansers containing alcohol, benzene or acetone. Do not store the Rabbit Habit together with vinyl products.

The Rabbit Habit is splash proof. Do not use it in the shower; do not submerge it in water.

7

TROUBLESHOOTING

If the Rabbit Habit doesn't start vibrating and rotating when you press the middle right and middle left button, try inserting fresh batteries. If that doesn't help, or if you experience any other problem, or have a question about the Rabbit Habit, please email: customerservice@vibratex.com.

WARRANTY

The Rabbit Habit is backed by a one-year limited warranty. If you have questions concerning the Rabbit Habit, or if it is not functioning properly, please email: customerservice@vibratex.com.

8

This warranty covers all defects in workmanship or materials, arising under normal usage and care, for a period of 12 months from the date of purchase. This warranty covers products purchased and used within the U.S. and Canada. You must keep your original proof-of-purchase to obtain warranty service. Do not attempt to repair this product yourself.

During the applicable warranty period, and within normal household use, Vibratex will replace the product with a comparable model. If you believe you have a warranty issue, please follow these steps:

- a. Email customerservice@vibratex.com.
- b. Carefully package product and ship to Vibratex. Insurance recommended.

9

c. Retain tracking information for your protection in case of loss or damage in shipment.

Vibratex is not responsible for loss or damage during incoming shipment.

WARNINGS

For adult use only. Do not use on skin that is swollen, inflamed, blistered or broken. This is not a medical device. No medical claims are warranted or implied by the use of this product. Clean thoroughly after each use. Do not use around your chest or throat. If you experience any discomfort during use, you should stop using this product and consult your healthcare professional.

10

SPECIFICATIONS

Material: Body-safe elastomer, ABS
Powered by 4 AAA batteries
Designed & developed in Japan
Made in Japan and PRC

* Specifications are subject to change without prior notice.

DISPOSAL INFORMATION

Please discard batteries responsibly. If available where you live, please drop them off for recycling.

11

THE RABBIT HABIT BY VIBRATEx

For over 30 years Vibratex has brought
America toys with a heritage;
unique, thoughtfully crafted,
with the power to satisfy, again and again.



Awaken new sensations.
www.Vibratex.com

© 2014 Vibratex, Inc. All rights reserved.