

CONTENTS

Sugar Pop	1
Getting started	2-3
Installing batteries	. 3-4
Using the Sugar Pop	. 4-6
Care and cleaning	7
Troubleshooting	.7-8
Warranty	8-10
Warnings	10
Specifications	11
Disposal information	11

SUGAR POP

Congratulations. And thank you. You are about to experience the Sugar Pop from Vibratex. Sugar Pop will thrill you deep inside, with the alluring motion of a belly dancer right on your G-spot. Luscious, body-safe elastomer amplifies every twirling move. We hope you will be wonderfully satisfied with the Sugar Pop.

For over 30 years Vibratex has brought America fine pleasure products with a heritage: unique, thoughtfully crafted, with the power to satisfy, again and again. Vibratex first rose to fame after Charlotte, in Sex and the City, discovered the thrills of the original Rabbit Habit® by Vibratex in 1998.

- 1

GETTING STARTED

To get started, insert batteries as described below. Then, press the middle left button (tickler vibration) and middle right button (shaft rotation) to get the magic started. See "Installing batteries" and "Using the Sugar Pop" below for more information.

- 1 Tickler
- 2 Rotating shaft
- 3 Pearls
- 4 Tickler pattern control
- 5 Tickler on, intensity control
- 6 Immediate-off button, tickler
- 7 Shaft pattern control
- 8 Shaft rotation on, intensity control
- 9 Immediate-off button, shaft



INSTALLING BATTERIES

To open the battery compartment, hold the Sugar Pop upright, with the white control unit down. Gently twist the cap, at the bottom of the white control unit, half a turn clockwise. In the battery carrier that appears, place 4

AAA batteries in the indicated direction. Reinsert the battery carrier and then replace the cap, securing it by twisting it gently half a turn counter-clockwise.

USING THE SUGARPOP

The Sugar Pop's motion is almost infinitely customizable. Enjoy!

The left buttons control tickler vibration.
The right buttons control shaft rotation.

Press the middle left button to turn on the tickler vibration, and the middle right button to turn on the shaft rotation. Press either button again to increase the intensity of vibration or rotation through three additional intensity

levels. Press either button a fifth time to return to the lowest intensity.

Press the top left button to change the tickler vibration to a quick pulsating pattern, then an elongated pulsating, an escalating pulsating, a rising and falling pulsating pattern, and finally back to steady vibration.

Press the top right button once to change the shaft rotation to steady clockwise, then to back and forth, then to intermittent counter-clockwise, then intermittent clockwise, and finally back to steady counter-clockwise **To immediately shut down** either the tickler or the rotating shaft, **press the bottom left** or bottom right button.

If desired, both silicone-based and water-based lubricants can be used with the Sugar Pop. Do not use any other type of cream, butter, petroleum jelly or oil.

Do not attempt to bend the shaft. This may damage the mechanics of both the pearls and the shaft and may destroy the vibe.

WARNING: Do not use the Sugar Pop for more than 20 minutes at a time. Be careful never to fall asleep with the product turned on.

Э

6

CARE AND CLEANING

Clean the upper, elastomer, part of the Sugar Pop before the first use, and after each use, with an anti-bacterial toy cleaner or with a mild anti-bacterial soap and warm water. Dry completely before storing. Never use cleansers containing alcohol, benzene or acetone. Do not store the Sugar Pop together with vinyl products.

The Sugar Pop is splash proof. Do not use it in the shower; do not submerge it in water.

TROUBLESHOOTING

If the Sugar Pop doesn't start vibrating and rotating when you press the middle right and

7

middle left button, try inserting fresh batteries. If that doesn't help, or if you experience any other problem, or have a question about the Sugar Pop, please email: customerservice@vibratex.com.

WARRANTY

The Sugar Pop is backed by a one-year limited warranty. If you have questions concerning the Sugar Pop, or if it is not functioning properly, please email: customerservice@vibratex.com.

This warranty covers all defects in workmanship or materials, arising under normal usage and care, for a period of 12 months from the date of purchase.

7

This warranty covers products purchased and used within the U.S. and Canada. You must keep your original proof-of-purchase to obtain warranty service. Do not attempt to repair this product yourself.

During the applicable warranty period, and within normal household use, Vibratex will replace the product with a comparable model. If you believe you have a warranty issue, please follow these steps:

- a. Email customerservice@vibratex.com.
- b. Carefully package product and ship to Vibratex. Insurance is recommended.
- c. Retain tracking information for your protection in case of loss or damage in shipment.

Vibratex is not responsible for loss or damage during incoming shipment.

WARNINGS

For adult use only. Do not use on skin that is swollen, inflamed, blistered or broken. This is not a medical device. No medical claims are warranted or implied by the use of this product. Clean thoroughly after each use. Do not use around your chest or throat. If you experience any discomfort during use, you should stop using this product and consult your healthcare professional.

10

SPECIFICATIONS

Material: Body-safe elastomer, ABS Powered by 4 AAA batteries Designed & developed in Japan Made in Japan and PRC

* Specifications are subject to change without prior notice.

DISPOSAL INFORMATION

Please discard batteries responsibly. If available where you live, please drop them off for recycling.

SUGARPOP By Vibratex

For over 30 years Vibratex has brought America toys with a heritage; unique, thoughtfully crafted, with the power to satisfy, again and again.



Awaken new sensations.

www.Vibratex.con

© 2014 Vibratex, Inc. All rights reserved.