



CONTENTS

Mystic..... 1
 Getting started 2-3
 Charging the Mystic 3-4
 Using the Mystic 4-5
 Care and cleaning 6
 Troubleshooting..... 7-8
 Warranty 8-9
 Warnings..... 10
 Specifications 11
 Disposal information 11

MYSTIC


Thank you for choosing the Mystic Rechargeable from Vibratex - a curvy, talented lover that never tires. Silent, strong and shaped like your body, it's a pleasure to hold and cozy up with. We hope you will be wonderfully satisfied with the Mystic Rechargeable.

For over 30 years, Vibratex has brought America fine pleasure pieces with a heritage: unique, thoughtfully crafted, with the power to satisfy, again and again. Vibratex first rose to fame after Charlotte, in *Sex and the City*, discovered the thrills of the original Rabbit Habit® by Vibratex in 1998.

GETTING STARTED

Before starting, charge the Mystic as described below. See "Charging the Mystic" for more information. Once charged, press the on/off button to activate. See "Using the Mystic" for more information.

- | | |
|--------------------------------|-------------------|
| 1 - Charging port | 6 - Cable |
| 2 - Indicator light | 7 - Charging plug |
| 3 - On/Off button | 8 - USB plug |
| 4 - Function button | 9 - Wall adapter |
| 5 - Duplicate function buttons | |

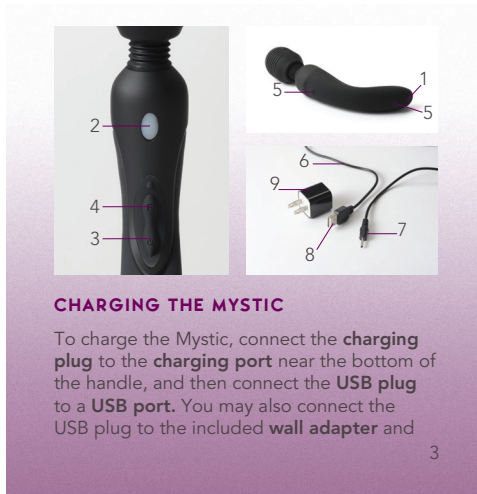

CHARGING THE MYSTIC

To charge the Mystic, connect the **charging plug** to the **charging port** near the bottom of the handle, and then connect the **USB plug** to a **USB port**. You may also connect the USB plug to the included **wall adapter** and

connect the wall adapter to a regular 110V outlet. The **indicator light** will shine steadily, in pink, when charging, and switch off when fully charged. A complete charge takes approximately 2-3 hours.

USING THE MYSTIC

The Mystic has three different vibration intensities and three exciting vibration patterns. To get started, press the **on/off button**. Then, press any **function button** to increase the vibration intensity through medium and high levels. Press the function button again to activate three different vibration patterns. Press the button a sixth time to revert to steady, low vibration.

There are three **identical function buttons** for easy reach in almost any position. See the illustration for their locations.

The indicator light shines blue, steadily, whenever the Mystic is on. The Mystic is **plug-and-play**, and can be used both plugged in and cordless. The indicator light blinks pink/blue when used plugged in.

To **immediately shut down** the Mystic at any time, press the on/off button.

If desired, **water-based lubricants** can be used with the Mystic. Do not use lubricants containing silicone, or any other type of cream, butter, petroleum jelly or oil.

CARE AND CLEANING

Clean the Mystic before the first use, and after each use, with an anti-bacterial toy cleaner or with a mild anti-bacterial soap and warm water. Dry completely before storing. Never use cleansers containing alcohol, benzene or acetone. Do not store the Mystic together with vinyl products.

The Mystic is splash proof. Do not submerge it in water.

WARNING: Do not charge the Mystic near water.

TROUBLESHOOTING

If the Mystic doesn't start vibrating when you press the on/off switch:

- The battery is drained. Connect your charger.

If the pink charging indicator on the Mystic doesn't light up when connected to a power source:

- The battery is completely empty. Allow several minutes for the unit to respond.
- The unit, or the wall adapter, is not properly connected. Check your power source, USB plug, charging plug and all connections.

If you experience any other problem, or have a question about the Mystic, please email: customerservice@vibratex.com.

WARRANTY

The Mystic is backed by a one-year limited warranty. If you have questions concerning the Mystic, or if it is not functioning properly, please email: customerservice@vibratex.com.

This warranty covers all defects in workmanship or materials, arising under normal usage and care, for a period of 12 months from the date of purchase. This warranty covers products purchased and used within the U.S. and Canada. You must keep your original proof-

of-purchase to obtain warranty service. Do not attempt to repair this product yourself.

During the applicable warranty period, and within normal household use, Vibratex will replace the product with a comparable model.

If you believe you have a warranty issue, please follow these steps:

- a. Email customerservice@vibratex.com.
- b. Carefully package product and ship to Vibratex. Insurance is recommended.
- c. Retain tracking information for your protection in case of loss or damage in shipment. Vibratex is not responsible for loss or damage during incoming shipment.

WARNINGS

For adult use only. Do not use on skin that is swollen, inflamed, blistered or broken. This is not a medical device. No medical claims are warranted or implied by the use of this product. Clean thoroughly after each use. Do not use around your chest or throat. If you experience any discomfort during use, you should stop using this massager and consult your healthcare professional.

WARNING: Do not charge the Mystic near water.

CARE AND CLEANING

Clean the Mystic before the first use, and after each use, with an anti-bacterial toy cleaner or with a mild anti-bacterial soap and warm water. Dry completely before storing. Never use cleansers containing alcohol, benzene or acetone. Do not store the Mystic together with vinyl products.

The Mystic is splash proof. Do not submerge it in water.

WARNING: Do not charge the Mystic near water.

11

MYSTIC RECHARGEABLE

By Vibratex

For over 30 years Vibratex has brought America toys with a heritage; unique, thoughtfully crafted, with the power to satisfy, again and again.

The logo for Vibratex, featuring the word "Vibratex" in a stylized, cursive font with a registered trademark symbol.

Awaken new sensations.

www.Vibratex.com

© 2016 Vibratex, Inc. All rights reserved.